
 




Parts List

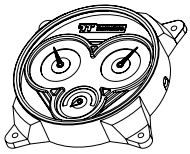

D x 1



E x 1



 
F x 4



G x 4



A x 1



B x 1



C x 1




L x 1



N x 1


Installation Guide

1

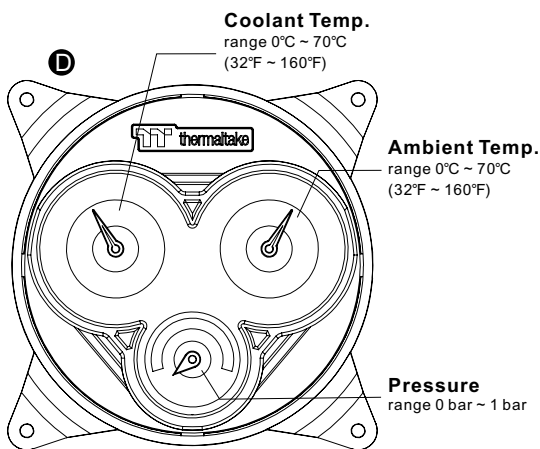


2

Case

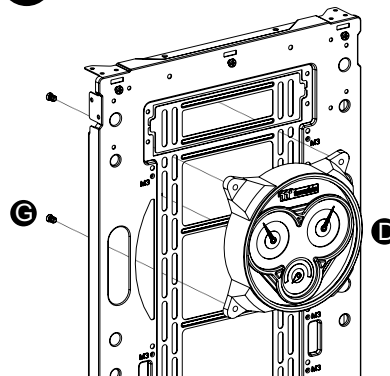


Install Pacific TF3 at
any 120mm fan spots

Radiator

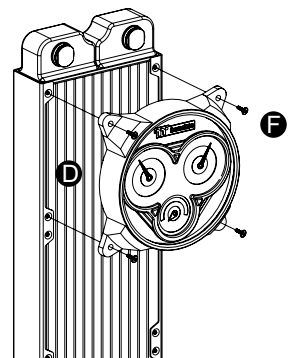


Install Pacific TF3 at
the radiator

3

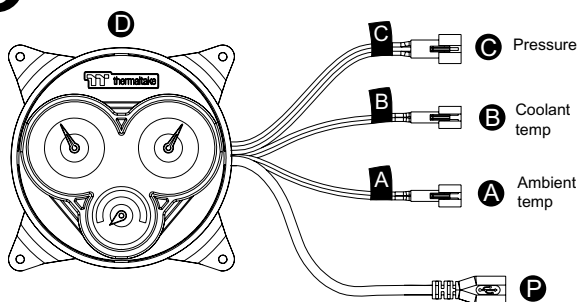


Connect the cables and connectors according to the corresponding labels

4

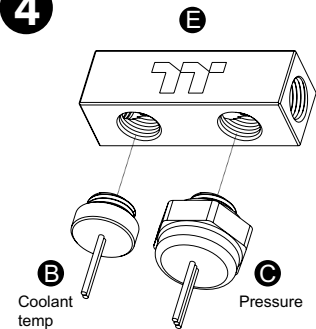


Install the liquid temperature sensor(B)
and liquid pressure sensor (C)
on the 4-way connector block(E)

5

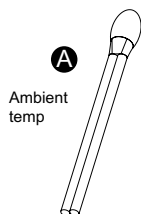

Place the chassis ambient
temperature sensor(A)
at the appropriate spot

6

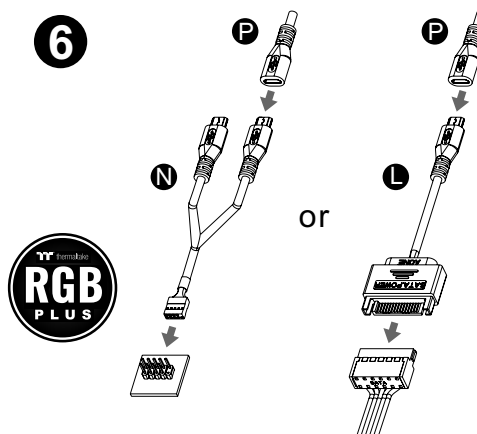

You could select one of the following
ways of connections:
9pin USB 2.0(N): For power supply and
TT RGB Plus 2.0 software control
SATA(L): Only for power supply

TT RGB Plus Software control interface


Please download TT RGB PLUS from Thermaltake's Official website.

<https://www.thermaltake.com/downloads>

OS compatibility: Windows 10, Windows 11

Pacific TF3 Liquid Cooling System Dashboard Software User Interface


MY PC - PC INFORMATION

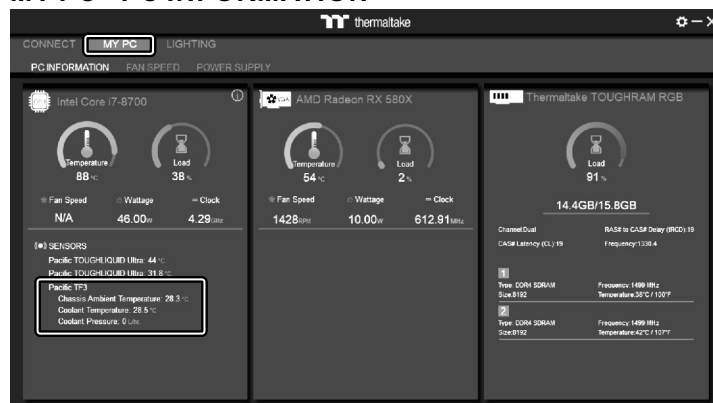

Show PC Information

- CPU Information: Temperature, Load, Fan Speed, Wattages, Frequency.
- GPU Information: Temperature, Load, Fan Speed, Wattages, Frequency (Supports SLI).
- Memory Information: Channel, tRCD, CL, Frequency, Type, Temperature, Size
- SENSORS: Show the Pacific TF3 Coolant Temperature, Chassis Ambient Temperature, and Coolant Pressure.

LIGHTING

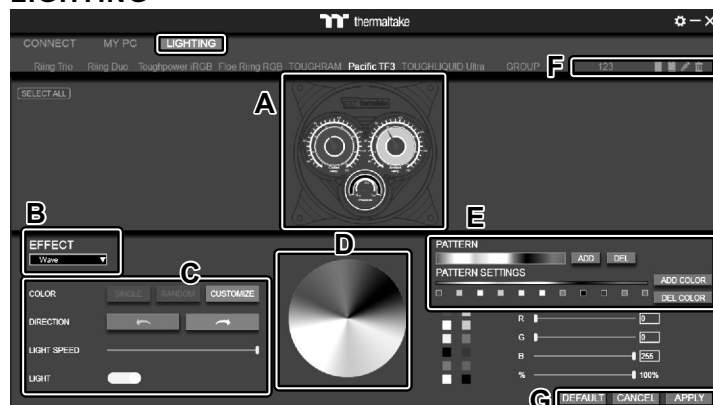

A. Preview and edit the lighting effect.

B. Select 23 Lighting Effects.

C. Lighting effect settings.

D. Color palette: select lighting color

E. PATTERN: Set up the color pattern ring.


F. Profile Settings: New, Copy, Edit, Delete

G. DEFAULT: Reset the lighting effects.

CANCEL: Deselect the LEDs for the preview screen.

APPLY: Execute and store lighting effects.

SETTINGS

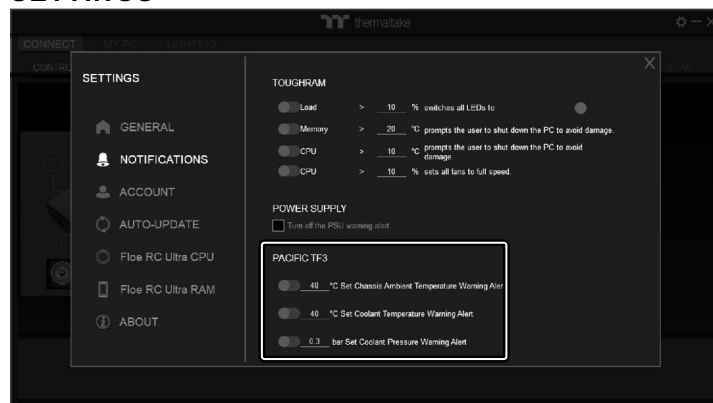

Pacific TF3 Liquid Cooling System Dashboard Notification Settings

- 40°C Set Chassis Ambient Temperature Warning Alert. (Default 40°C)
- 40°C Set Coolant Temperature Warning Alert. (Default 40°C)
- 0.3 bar Set Coolant Pressure Warning Alert. (Default 0.3 bar)



The software interface may vary with feature updates, please download the latest software version from www.thermaltake.com