




InstaShow™ S Quick Start Guide

WDC20




V 2.00
P/N: 4JJJ01.001








InstaShow™ S Buttons	InstaShow™ S Host & Lid	4 Antennas	Cradle
----------------------	-------------------------	------------	--------

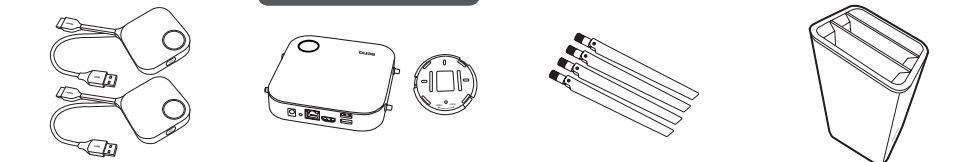


Adapter & Plugs	Extender Power Cable (EU Countries Only)	Cable: HDMI A(M) to A(M)	Cable: USB A(F) to USB A(M)
-----------------	------------------------------------------	--------------------------	-----------------------------

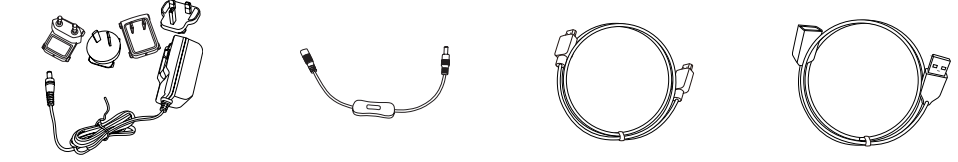


Screws & Rubber Foot	Velcro Strap	Quick Start Guide	Safety Statement
----------------------	--------------	-------------------	------------------

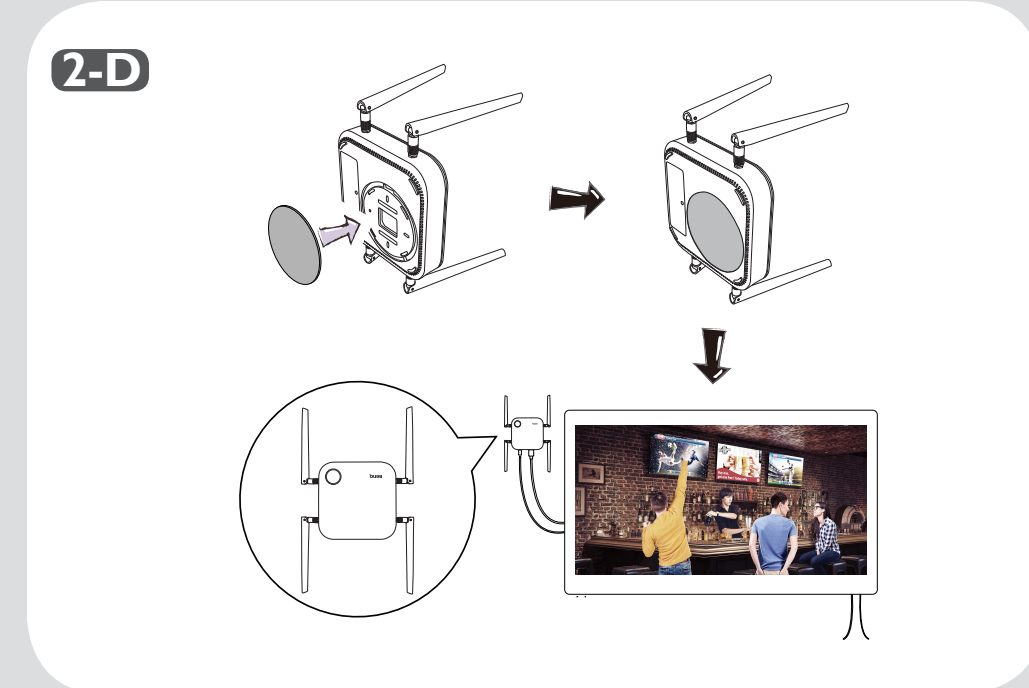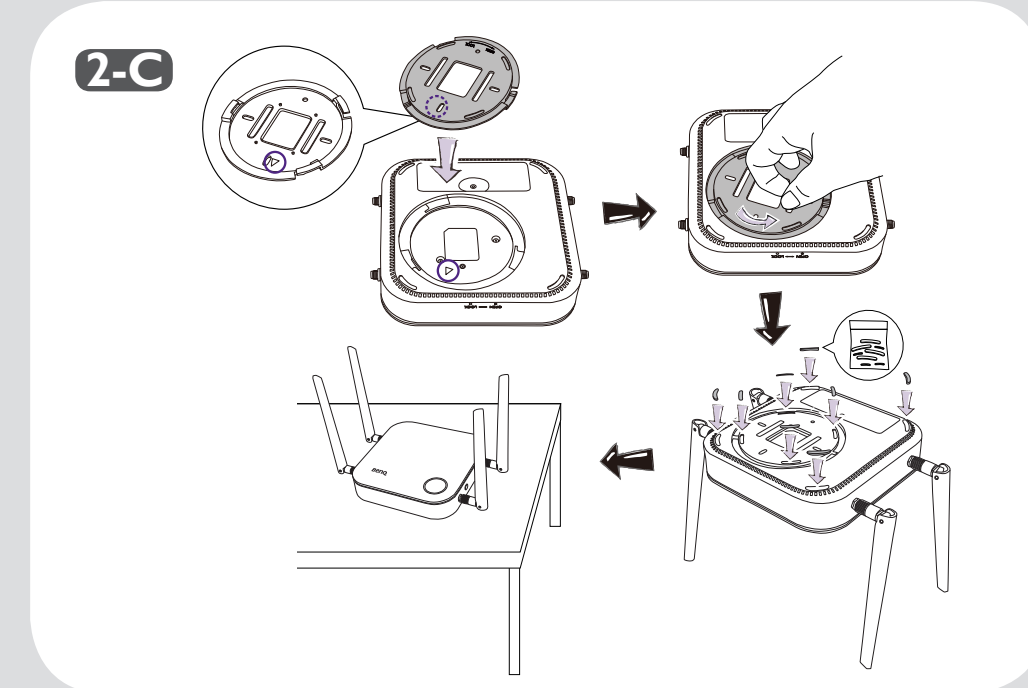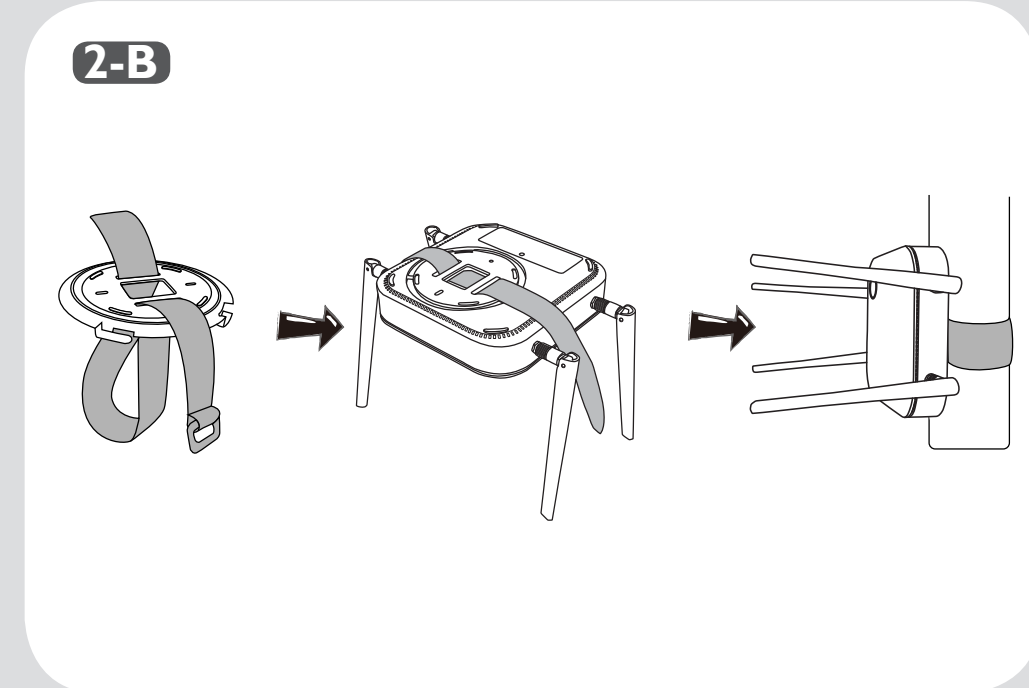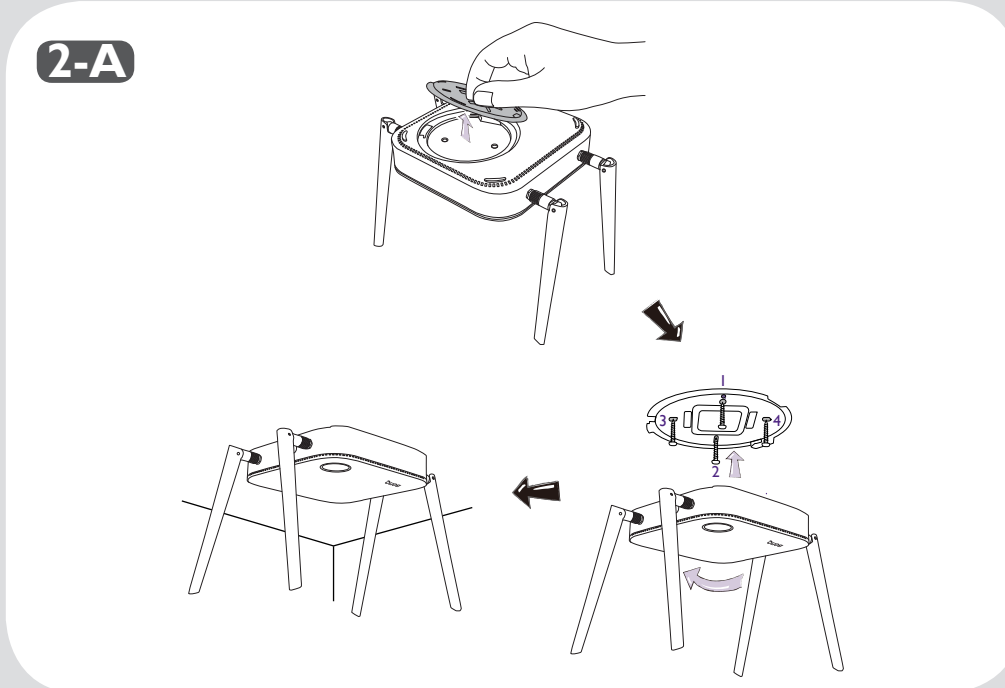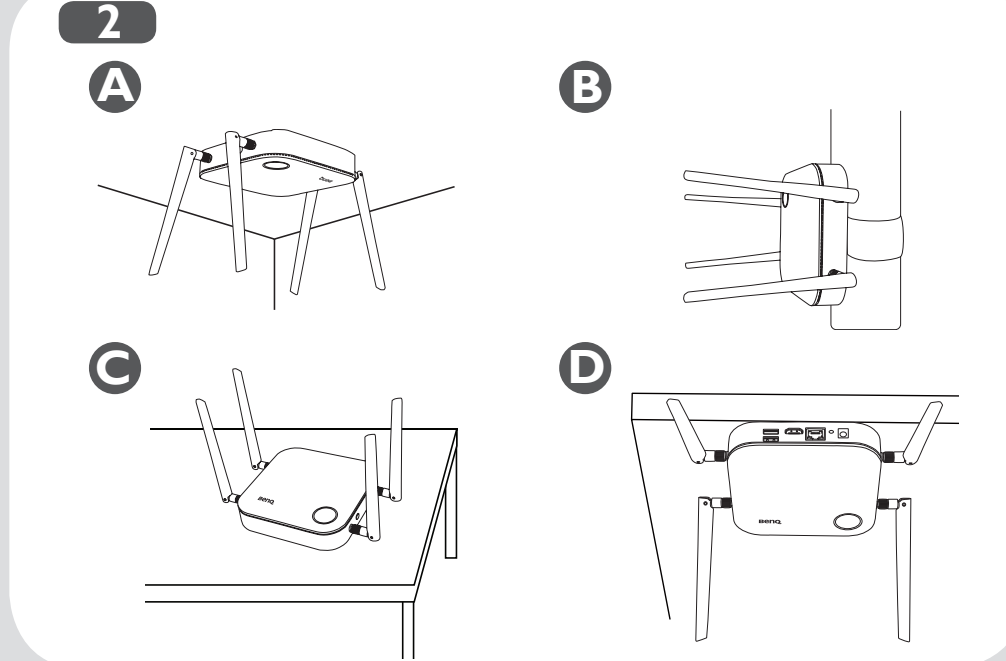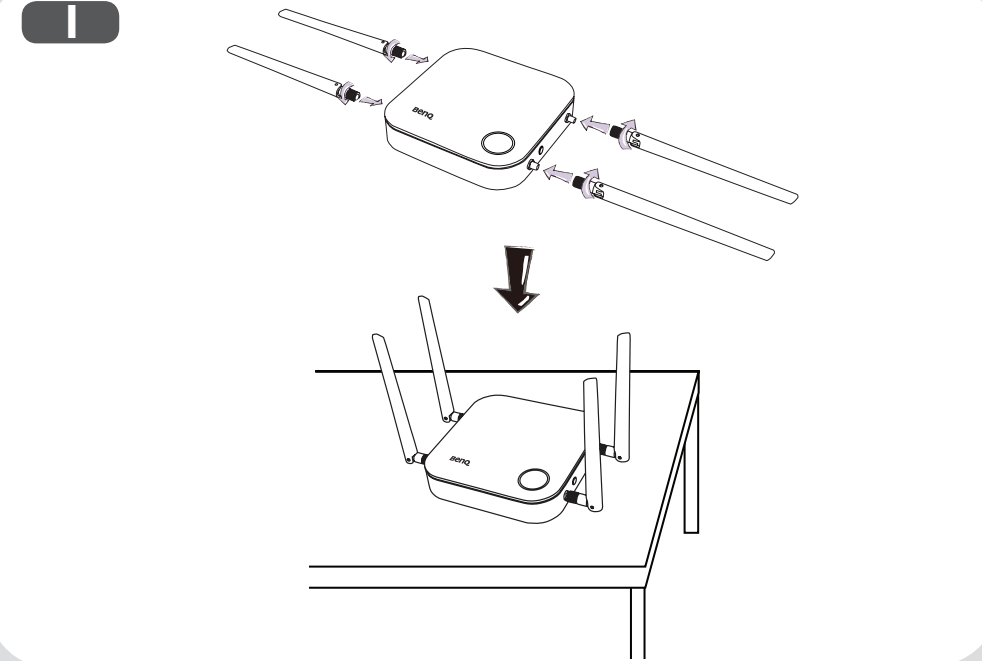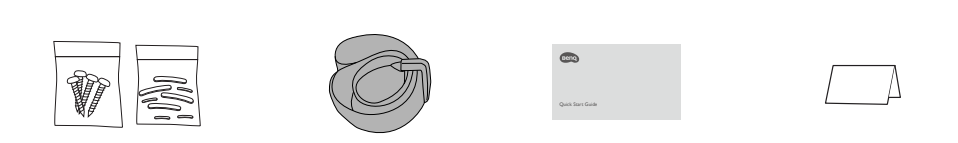


 


3-A

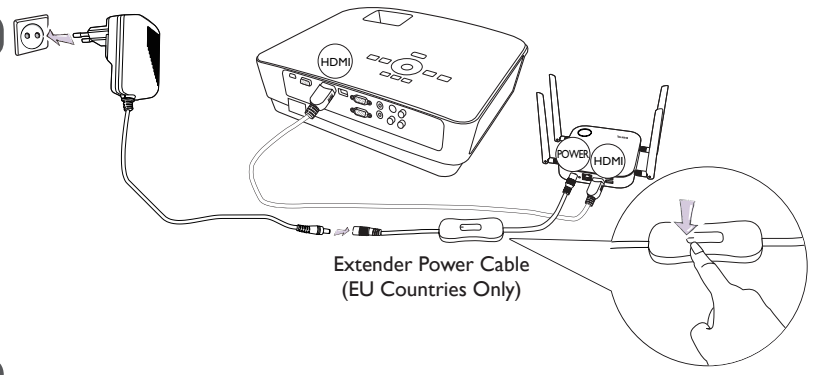


3-B

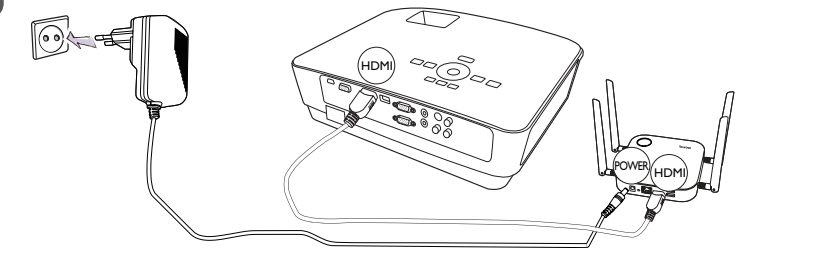

4

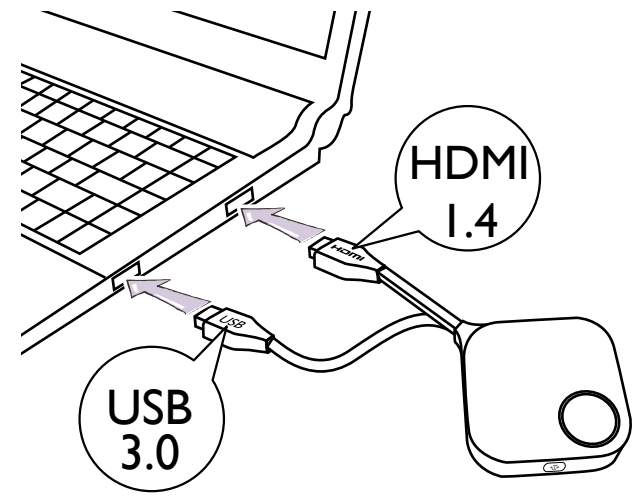

5

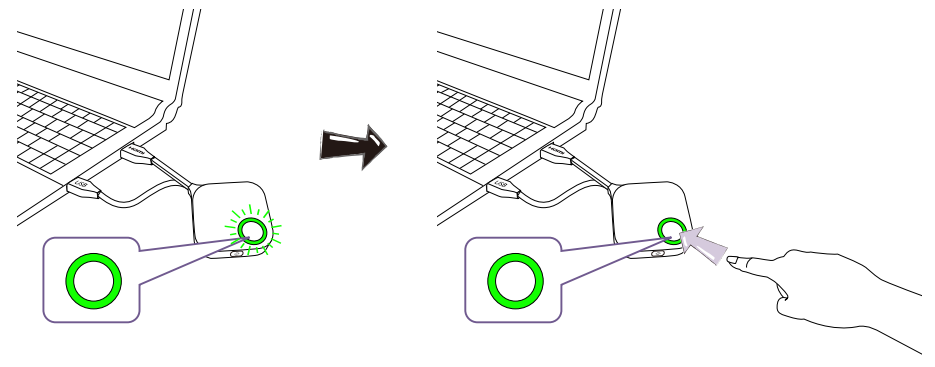

6

