


inateck®

Instruction Manual


KB01104 Keyboard

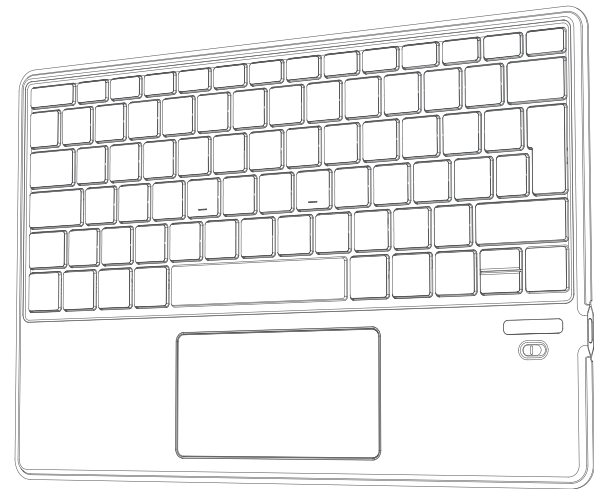


English · Deutsch

English

• Product Diagram

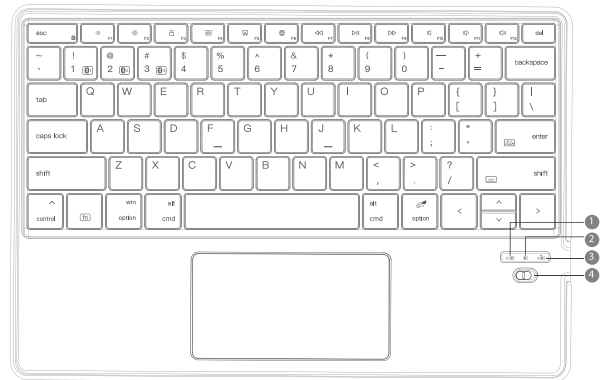

- 1 Caps Lock Indicator/Bluetooth Channel 1 Indicator
- 2 Bluetooth Channel 2 Indicator
- 3 Battery Indicator/ Bluetooth Channel 3 Indicator
- 4 Power Switch

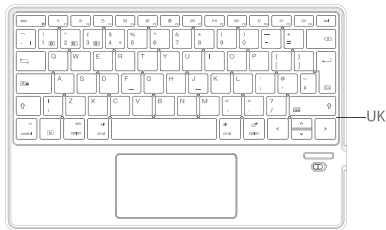

1. Bluetooth Pairing

Step 1: For the first use, slide the power switch to the On position and then KB01104 will automatically enter Bluetooth Channel 1 pairing mode. To enter the Bluetooth pairing mode, you can also hold **fn** + **1** simultaneously. When the Bluetooth indicator 1 flashes in white, it means KB01104 is in Bluetooth Channel 1 pairing mode.

Step 2: On your iPad or Windows devices, turn on Bluetooth and then “Inateck KB01104” will show up in available devices list.

Step 3: Tap “Inateck KB01104” to pair it with your device and then the Bluetooth indicator will turn off, which means that Bluetooth pairing is completed.

Fix Bluetooth Pairing Problems

Step 1: Go to Bluetooth page, find “Inateck KB01104” in paired devices list and delete the previous pairing record. If there are multiple pairing records, please delete them all.

Step 2: Hold **esc** + **+** simultaneously for 3 seconds and then the three indicators will blink for 3 times once the factory reset is completed.

Step 3: Turn off Bluetooth on your device and turn it back on. Then, pair it with your Inateck KB01104.

2.Shortcut Keys

esc	Undo	F1	Brightness-	F2	Brightness+
F3	Lock	F4	Task View	F5	Take a screenshot
F6	Switch keyboard layout	F7	Last Track	F8	Play/Pause
F9	Next Track	F10	Mute	F11	Volume-
F12	Volume+	del	Delete		

Note: The following operations are only applicable to Windows.

How to Use F1-F12

You may press **fn** + **esc** to enable/disable the Fn key lock. (The keyboard disables the Fn key lock by default.)

When the Fn Lock is enabled

Press F1 can trigger the functionality owned by F1 key;

Press the combination of **fn** + **F1**, simultaneously will dim the brightness of the screen.

This method applies to all F Keys (F1-F12)

When the Fn Lock is disabled (Default Status)

Press F1 can dim the brightness of the screen.

Press the combination of **fn** + **F1** simultaneously will trigger the functionality owned by F1 key.

The Combination of Fn and Other Keys

fn + esc	Enable/Disable Fn Lock
fn + alt / cmd	Check the Battery Level
fn + option	Turn on/off Trackpad
fn + 1	Short press to enter 1
	Long press to enter 1 pairing mode
fn + 2	Short press to enter 2
	Long press to enter 2 pairing mode
fn + 3	Short press to enter 3
	Long press to enter 3 pairing mode
fn + shift	Adjust the backlight brightness
fn + enter	Adjust the backlight color

3.LED Indicator

Indicator 1 (White) A/1

Caps Lock On	Solid
Caps Lock Off	Off
Bluetooth Channel 1--Reconnecting	Flash once per second
Bluetooth Channel 1--Pairing	Flash twice per second
Connected/Unconnected	Off

Indicator 2 (Blue) 2

Bluetooth Channel 2 Reconnecting	Flash once per second
Bluetooth Channel 2--Pairing	Flash twice per second
Connected/Unconnected	Off

Indicator 3 (Red/Green) 3/3

Bluetooth Channel 3 Reconnecting	Flash in red, once per second
Bluetooth Channel 3--Pairing	Flash in red, twice per second
Connected/Unconnected	Off
Battery level<20%	Flash in red, four times per second (Connected)
Charging	Solid in red
Fully charged	Solid in green

4.Restore Factory Defaults

Hold **esc** + **+** for 3 seconds and then the three indicators will blink for 3 times once the factory reset is completed.

5.Check Battery Level

Hold **fn** + **alt** / **cmd** simultaneously to check the battery level according to the blinking frequency of the red battery indicator.

Blinking Frequency	Battery Level
Once	0-25%
Twice	25%-50%
Three Times	50%-75%
Four Times	75%-100%

Note:This method is only available when the keyboard is connected

6. Charging

When the battery level is under 20%, the red battery indicator will blink. Please recharge your keyboard via the included USB cable. The keyboard would be fully charged in 2~3 hours. The battery indicator will stay solid in red when the keyboard is charging. Once it's fully charged, the battery indicator will turn green.

7. Sleep Mode

When KB01104 is left idle for 10 minutes, it will enter sleep mode and the Bluetooth connection will be disrupted. The connection can be rebuilt with a press of any key.

8.Product Specification

Bluetooth Version	Bluetooth 5.3
Bluetooth Range	10 m
Charging Time	2~3 h
Continuous Working Time	About 150 h
Operating Temperature	-10°C ~ +55°C
Bluetooth Frequency Range	2402-2480MHZ
Actuation Force	60±10g
Battery Capacity	500mAh

9.Packing List

KB01104 *1
Charging Cable *1
Instruction Manual *1

FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Safety Warning:

This product contains a built-in rechargeable lithium battery. Please observe the following safety precautions: do not dismantle, hit, crush, or expose the battery to fire. If the battery experiences severe swelling, discontinue use immediately. Avoid placing the battery in high-temperature environments, and do not use it if it has been immersed in water. During transportation, do not mix the battery with metallic objects.

Batteriesicherheitshinweis:

Dieses Produkt enthält einen eingebauten wiederaufladbaren Lithium-Akku. Bitte beachten Sie die folgenden Sicherheitsvorkehrungen: Zerlegen Sie den Akku nicht, schlagen Sie ihn nicht, zerquetschen Sie ihn nicht und setzen Sie ihn nicht Feuer aus. Bei starkem Aufblähen des Akkus verwenden Sie ihn bitte sofort nicht mehr. Vermeiden Sie es, den Akku in heißen Umgebungen zu platzieren, und verwenden Sie ihn nicht, wenn er in Wasser getaucht wurde. Mischen Sie den Akku während des Transports nicht mit metallischen Gegenständen.

Charging Precautions/Ladehinweise

EN:

The power delivered by the charger must be between min [0.05] Watts required by the radio equipment, and max [1.25] Watts in order to achieve the maximum charging speed.


DE:

Der vom Ladegerät gelieferte Strom muss zwischen dem Mindestwert von [0.05] Watt, der für die Funkgeräte erforderlich ist, und dem Höchstwert von [1.25] Watt liegen, um die maximale Ladegeschwindigkeit zu erreichen.



Deutsch

• Produkt Diagramm

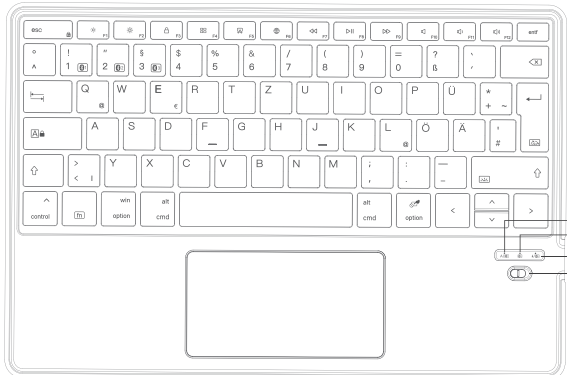

- 1 Anzeige für Feststelltaste/ LED Anzeige für Bluetooth Kanal 1
- 2 LED Anzeige für Bluetooth Kanal 2
- 3 Akku Anzeige/ LED Anzeige für Bluetooth Kanal 3
- 4 Ein-/ Aus-Schalter

1. Bluetooth-Kopplung

Schritt 1: Für die erste Verwendung schieben Sie den Ein-/Aus-Schalter in die Position "Ein" und KB01104 wechselt automatisch in den Bluetooth-Kanal 1 Kopplungs-Modus. Um in den Bluetooth-Kopplungs-Modus zu gelangen, können Sie auch **fn + 1** gedrückt halten. Wenn die Bluetooth-Anzeige weiß blinkt, bedeutet dies, dass sich die KB01104 im Bluetooth-Kanal 1 Kopplungs-Modus befindet.

Schritt 2: Schalten Sie Bluetooth auf Ihrem iPad oder Windows-Gerät ein und dann wird "Inateck KB01104" in der Liste der verfügbaren Geräte angezeigt.

Schritt 3: Tippen Sie auf "Inateck KB01104", um sie mit Ihrem Gerät zu verbinden. Dann schaltet sich die Bluetooth-Anzeige aus, was bedeutet, dass die Bluetooth-Kopplung abgeschlossen ist.

Behebung von Bluetooth-Pairing-Problemen

Schritt 1: Gehen Sie zur Bluetooth-Seite, suchen Sie "Inateck KB01104" in der Liste der gekoppelten Geräte und löschen Sie den vorherigen Kopplungsverlauf. Wenn es mehrere Kopplungseinträge gibt, löschen Sie diese bitte alle.

Schritt 2: Halten Sie **esc + `** gleichzeitig für 3 Sekunden gedrückt. Die drei Anzeigen blinken 3 Mal, sobald das Zurücksetzen auf Werkseinstellungen abgeschlossen ist.

Schritt 3: Schalten Sie Bluetooth auf Ihrem Gerät aus und dann wieder ein. Koppeln Sie es dann mit Ihrer Inateck KB01104.

2.Tastenkürzel

	Rückgängig machen		Helligkeit-		Helligkeit+
	Sperren		Task-Ansicht		Screenshot machen
	Tastatur-Layout wechseln		Letzter Titel		Wiedergabe/Pause
	Nächster Titel		Stumm		Lautstärke-
	Lautstärke+		Löschen		

Hinweis: Die folgenden Anweisungen gelten nur für Windows.

Wie nutzt man F1-F12

Sie können **fn + esc** drücken, um die Fn-Taste zu sperren. (Die Tastatur deaktiviert standardmäßig die Fn-Tastensperre.)

Wenn die Fn-Sperre aktiviert ist

Drücken Sie F1, um die Funktion auszulösen, die der F1-Taste zugeordnet ist.

Drücken Sie gleichzeitig die Kombination von **fn + F1**, um die Bildschirmhelligkeit zu verringern.

Diese Methode gilt für alle F-Tasten (F1-F12).

Wenn die Fn-Sperre deaktiviert ist (Standardstatus)

Drücken Sie F1, um die Bildschirmhelligkeit zu verringern.

Drücken Sie gleichzeitig die Kombination von **fn + F1**, um die Funktion auszulösen, die der F1-Taste zugeordnet ist.

Die Kombination von Fn und anderen Tasten

fn + esc	Aktivieren/ Deaktivieren Fn-Sperre
fn + alt cmd	Prüfen des Akkustandes
fn + option	Trackpad ein-/ ausschalten
fn + 1	Kurz drücken, um 1 zu aktivieren Lang drücken, um den 1 -Kopplungsmodus aufzurufen
fn + 2	Kurz drücken, um 2 zu aktivieren Lang drücken, um den 2 -Kopplungsmodus aufzurufen
fn + 3	Kurz drücken, um 3 zu aktivieren Lang drücken, um den 3 -Kopplungsmodus aufzurufen
fn + brightness up	Helligkeit der Hintergrundbeleuchtung einstellen
fn + brightness down	Farbe der Hintergrundbeleuchtung einstellen

3.LED-Anzeige

Anzeige 1 (Weiß) A/**1**

Feststelltaste ein	dauerhaft
Feststelltaste aus	Aus
Bluetooth-Kanal 1 - Wiederherstellung der Verbindung	Blinkt einmal pro Sekunde
Bluetooth-Kanal 1-Kopplung	Blinkt zweimal pro Sekunde
Verbunden/nicht verbunden	Aus

Anzeige 2 (blau) **2**

Bluetooth-Kanal 2 - Wiederherstellung der Verbindung	Blinkt einmal pro Sekunde
Bluetooth-Kanal 2-Kopplung	Blinkt zweimal pro Sekunde
Verbunden/nicht verbunden	Aus

Anzeige 3 (Rot/Grün) **3/3**

Bluetooth-Kanal 3 - Wiederherstellung der Verbindung	Blinkt rot, einmal pro Sekunde
--	--------------------------------

Bluetooth-Kanal 3-Kopplung	Blinkt rot, zweimal pro Sekunde
Verbunden/nicht verbunden	Aus
Akkukapazität <20%	Blinkt rot, viermal pro Sekunde (Verbunden)
Aufladen	Dauerhaft rot
Voll aufgeladen	Dauerhaft grün

4.Werkseinstellungen wiederherstellen

Halten Sie **esc + `** gleichzeitig für 3 Sekunden gedrückt. Die drei Anzeigen blinken 3 Mal, sobald das Zurücksetzen auf Werkseinstellungen abgeschlossen ist.

5.Akku-Stand prüfen

Halten Sie **fn + alt cmd** gleichzeitig gedrückt, um den um den Akku-Stand anhand der Blinkfrequenzen der roten LED-Anzeige zu überprüfen.

Blinkfrequenz	Akku-Stand
Einmal	0-25%
Zweimal	25%-50%
Dreimal	50%-75%
Viermal	75%-100%

Anmerkung:Diese Funktion ist nur verfügbar, wenn die Tastatur verbunden ist.

6. Aufladen

Wenn der Batteriestand unter 20% liegt, blinkt die rote Batterieanzeige. Bitte laden Sie Ihre Tastatur mit dem mitgelieferten USB-Kabel auf. Die Tastatur ist in 2 bis 3 Stunden vollständig aufgeladen. Die rote Batterieanzeige leuchtet dauerhaft, wenn die Tastatur aufgeladen wird. Sobald sie vollständig aufgeladen ist, leuchtet die grüne Batterieanzeige dauerhaft.

7. Ruhemodus

Wenn die KB0110 4 für 10 Minuten lang nicht benutzt wird, geht sie in den Ruhezustand über und die Bluetooth-Verbindung wird unterbrochen. Die Verbindung kann mit einem beliebigen Tastendruck wiederhergestellt werden.

8.Produktspezifikation

Bluetooth Version	Bluetooth 5.3
Bluetooth Reichweite	10 m
Ladedauer	2~3 Std.
Kontinuierliche Arbeitszeit	Ca. 150 Std.
Arbeitstemperatur	-10°C ~ +55°C
Bluetooth Frequenzbereich	2402-2480MHZ
Antriebskraft	60±10g
Akku-Kapazität	500mAh

9.Verpackungsinhalt

KB01104 *1
Ladekabel *1
Bedienungsanleitung *1

EU Declaration of Conformity

Inateck Co., Ltd. hereby declares that this device complies with the Directive 2014/53/EU .

A copy of the Declaration of Conformity can be accessed from <https://www.inateck.de/pages/inateck-euro-compliance>.



Service Center

Europe

F&M Technology GmbH

Tel: +49 341 5199 8410 (Working day 8 AM - 4 PM CET)

Fax: +49 341 5199 8413

Address: Fraunhoferstraße 7, 04178 Leipzig, Deutschland

North America

Inateck Technology Inc.

Tel: +1 (909) 698 7018 (Working day 9 AM - 5 PM PST)

Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA

日本


Inateck 株式会社

電話番号: +81 06 7500 3304

〒 547-0014 大阪府大阪市平野区長吉川辺 3 丁目 10 番 11 号

F&M Technology GmbH

For Product and Battery



Fraunhoferstraße 7, 04178 Leipzig, Deutschland

Tel: +49 341 5199 8410

Email: service@inateck.com

Postal code: 04178

Inateck Technology (UK) Ltd.

95 High Street, Office B, Great Missenden, United Kingdom, HP16 0AL

Tel: +44 20 3239 9869

Manufacturer

Shenzhen Inateck Technology Co., Ltd.

Address: Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China

Email: product@licheng-tech.com

Postal code: 518129